

425XL Deluxe DOWN UNDER WONDER®SHOWER SYSTEM

Customer Notice: We have identified potential for a problem in some installations in the way the diverter mounts to the existing shower pipe. This could result in leaking plus make it difficult for the hand held shower mount bracket to tighten properly and stay in place & level once installed. We have enclosed a bushing, Teflon tape and washers that will eliminate the possibility of having these problems. You may not have experienced any problems with your DELUXE WONDER®SHOWER SYSTEM however we highly recommend making this minor modification to your shower system to insure that you don't have these problems in the future thus giving you many years of trouble free showering. Please follow the instructions below for a quick and effective bushing installation.

We apologize for any inconvenience this problem may have caused and urge you to let us know immediately if there is anything we can do to help. Call 1-800-595-0385



Brass Bushing Installation

Items included: (1) Adaptor bushing (2) red fibre washer (1) roll Teflon tape



(Step 1)

Remove flexi-hose, hand held shower and 425XL Wonder®Shower from mount bracket/diverter. Remove mount bracket/diverter assembly from shower pipe. Unscrew counter clockwise.




(Step 2)

Wrap Teflon tape clockwise around pipe threads for 6 to 8 full turns. Screw bushing onto shower pipe threads clockwise, until hand tight. Finish tightening with adjustable wrench until tight and secure.

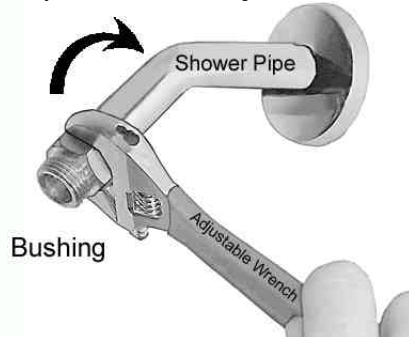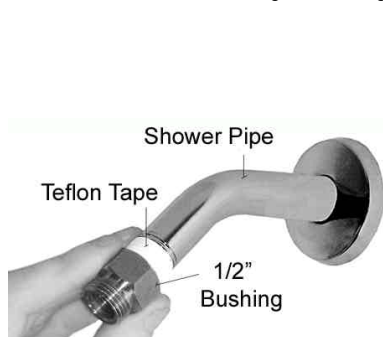


(Step 3)

Insert (1) red fibre washer into diverter nut (will be a round or a hexagon shaped) on top of rubber washer. Screw diverter to shower pipe threads clockwise until hand tight. Turn the diverter assembly clockwise while tightening nut until it's tightened and assembly is level. It may require 2-3 full turns of assembly for washer to seat on bushing – will get tight immediately then.

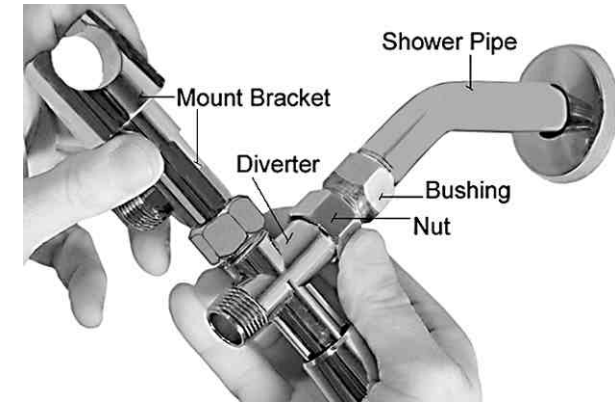

You may not need to use a wrench if you turned whole assembly until tight and secure positioning assembly as shown in illustration below.

“Properly installed mount bracket/diverter assembly”

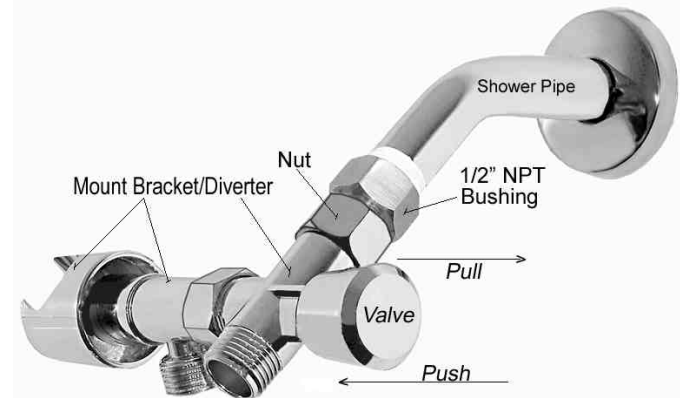

Please refer to full set of installation instructions to finish installing your Deluxe Down Under Wonder®Shower System. We've enclosed a full set of the original installation instructions for your convenience.

Questions? Call Wonder Help Line 1-800-595-0385!

Gregg Schuller (281) 630-5591

Website: www.wondershower.com

Email: tara@wondershower.com